

## Fitting New Headrest Cover

Remove the two Phillips screws located on the underside of the headrest (Fig. 58). You will see that the cover is held by staples which can be taken out using your screwdriver. Now remove cover by turning it inside out and peel it away from the foam. You need to reverse this operation to fit the new cover.


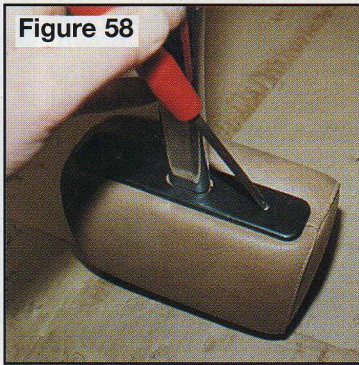


Figure 58



Figure 60

Figure 59

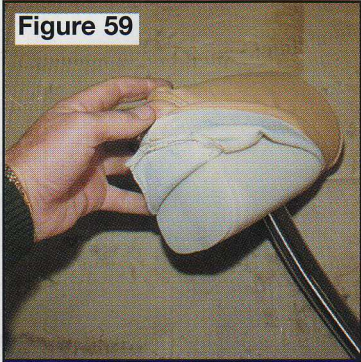

Peel the new cover over the foam (Fig. 59) very carefully so as not to tear the cover, then mould it into position. If your old foam has shrunk a little, add a slither of foam to one or both ends.

Using either tacks or a staple gun, secure the cover as shown and then replace the plate on the bottom (Fig. 60). Lastly

the headrest can be installed back on the seat back and away you go!

With all of your new interior kit installed, you're ready to reassemble your car.

Replace the convertible top and the top retainer bar in the same manner as they were removed.

Reconnect your battery.

You did it yourself! Yes, it was work, but the finished job was worth it. Go ahead and smile... you earned it. This is what pride is all about!

**"Keep'em On The Road"™ ... With Style !**

# ★ Exclusive ★

## Special Interior Kit For 1969-76 Triumph TR6

T6.8

VICTORIA BRITISH LTD.  
P.O. Box 14991  
Lenexa, Kansas 66285-4991

BULK RATE  
U.S. POSTAGE  
**PAID**  
VICTORIA BRITISH LTD

